

# ★ YODER SMOKERS ★

COMPETITION GRADE BBQ PRODUCTS

## Adjusting the hinges on your Yoder Smoker Pellet Grill.

We are going to explain the steps taken to adjust the hinges on your lid, if you notice it requires some adjustment to fit to the chamber better. As you look at the first few pictures, you can see that there is a considerable gap between the lid and the chamber.



To adjust the lid hinges for better fitment, we used the following tools to perform the following steps.

**¼" drive ratchet**

**¼" socket**

**Phillips head bit**

**3/8" wrench**



Begin by loosening the four Phillips head screws on the lid hinge using the ¼" ratchet, ¼" socket, and Phillips head bit.



Once the screws are loose, move to the front of the grill and physically adjust the lid to the chamber. Once you have found the desired lid position, tighten the four screws to the lid. Be careful not to overtighten the screws as you will risk stripping out the head of the screw. Now carefully hold the lid open and use the 3/8" wrench to finish securing the hinges in place. Close the lid to make sure that the lid is positioned to your liking.



As you can see in these pictures, the gap is no longer present and the lid rests against the chamber. If you have any questions, contact: [customerservice@yodersmokers.com](mailto:customerservice@yodersmokers.com).

